



LG Incite Touch Screen Replacement

This guide will show you how to install the touch screen on your phone.

Written By: Kimberly Kha



INTRODUCTION

If your phone's touch screen breaks or malfunctions, this guide will show you how to easily remove and replace it.



TOOLS:

- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [Tweezers](#) (1)



PARTS:

- [LG Incite touch screen](#) (1)

Step 1 — Battery



- Flip your phone over and locate the battery cover.

Step 2




- Slide the cover downward to reveal the battery below.

Step 3



- Place the plastic opening tool in the divet in the bottom left-hand corner.
- Pry the battery upward to remove it.

Step 4 — Back Panel

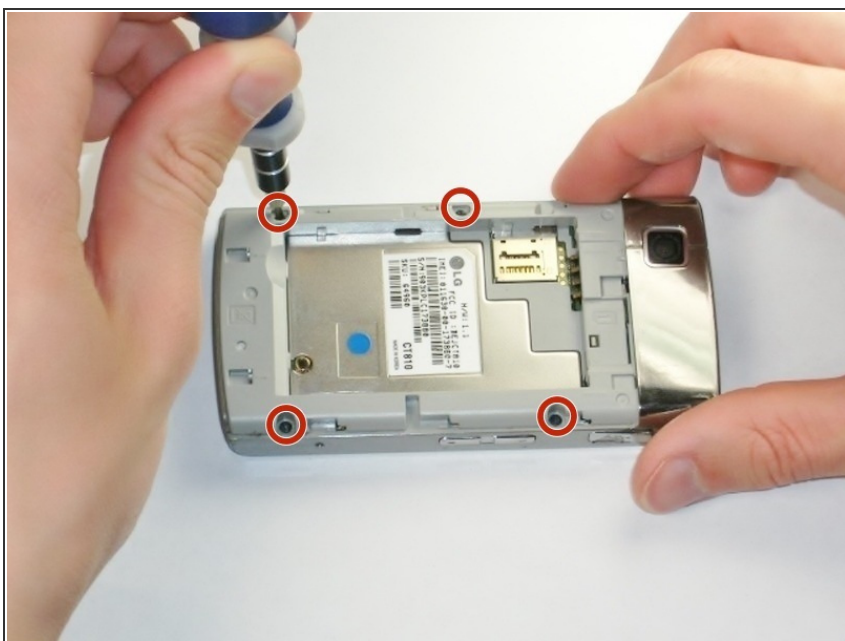


- Unscrew the four 4.5mm screws using the Philips #00 screw driver.

Step 5



- Wedge the plastic opening tool between the screen and the case.
- Gently move the tool along the edge to loosen the screen from the casing. Repeat this for the entire outer edge of the screen.
- ⓘ You should not completely separate the screen from the case in this step.

Step 6

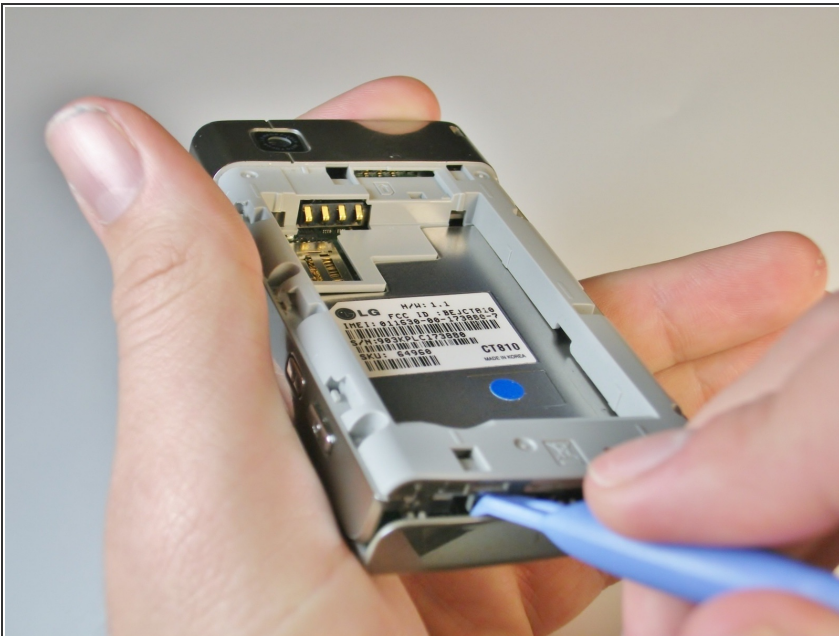

- Flip your phone over to the battery side.
- Push the plastic opening tool into the lower seam between the frame and front cover to separate the back panel.
- ⚠ Push the scroll wheel, located in the upper left corner, in while lifting the back cover off to prevent breaking it.
- ⚠ The volume, lock, and camera buttons are loose so don't lose them.

Step 7 — Motherboard




- Use the metal tweezers to gently peel the yellow tab from the left edge of the phone at the two plastic bases.
- ⚠ Do not completely remove the tab from the body, it should still be connected to the phone by the orange plastic.
- Repeat this for the white tab on the opposite side of the phone.
- ⓘ This tab also has two plastic bases adhering it to the edge of the phone.

Step 8



- Insert your plastic opening tool underneath the speaker/camera panel, and gently pry it upwards.
- ⚠ Do not fully remove the panel! It should still be attached to the motherboard by a red and black wire.

Step 9

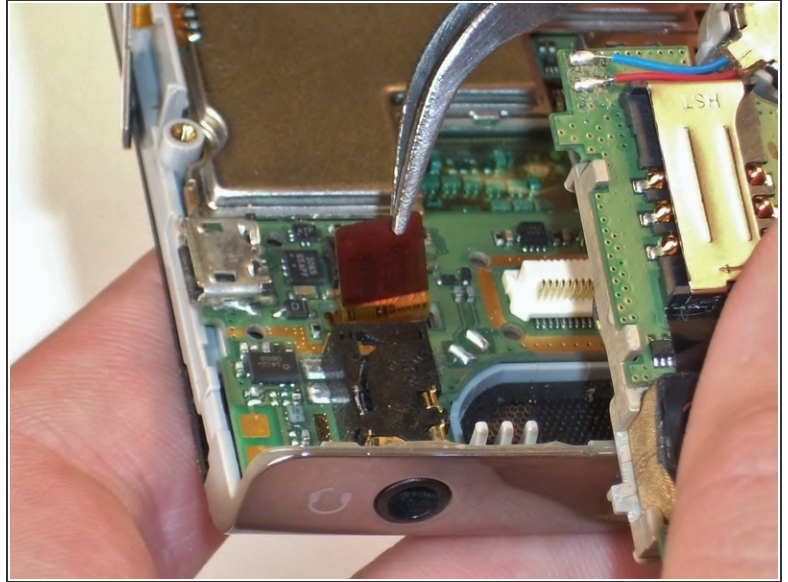

- Use the metal tweezers to gently lift the edge of the maroon tab, it should pop up easily.

⚠ Do not remove the tab completely, it should still be connected to the phone.


Step 10



- Insert the plastic opening tool underneath the motherboard towards the bottom edge of the phone and gently pry it from its case.
- Lift the motherboard and slide it towards you by hand to free it from the phone.

⚠ The call and end buttons may fall out when the motherboard is removed! Don't lose the buttons.

Step 11 — Touch Screen

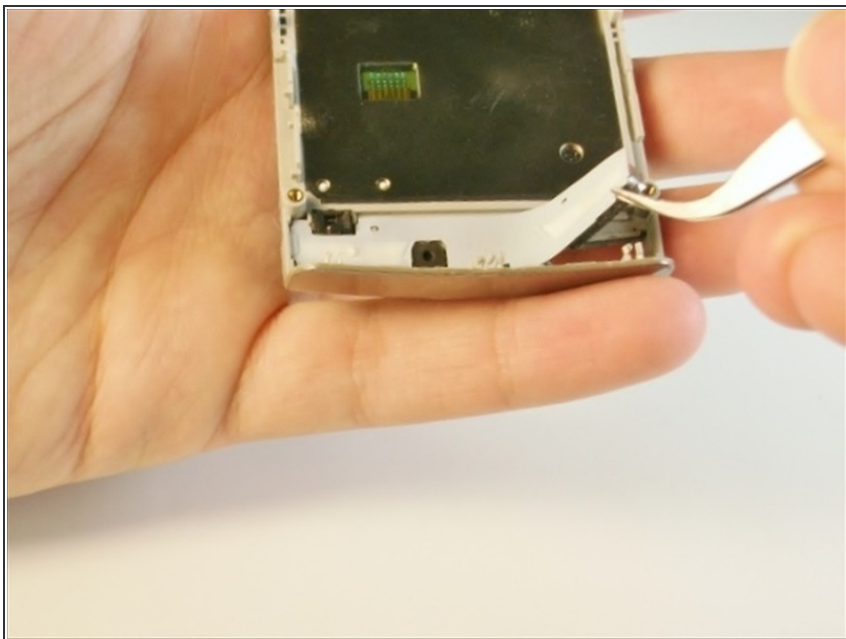


- Remove the call and end buttons using the metal tweezers.


Step 12



- Wedge the plastic opening tool between the screen and sides of the phone.
- Slide the tool along the edge to loosen the screen.
- Repeat for the opposite side.



 Don't completely remove the screen yet to avoid damaging the screen.

Step 13

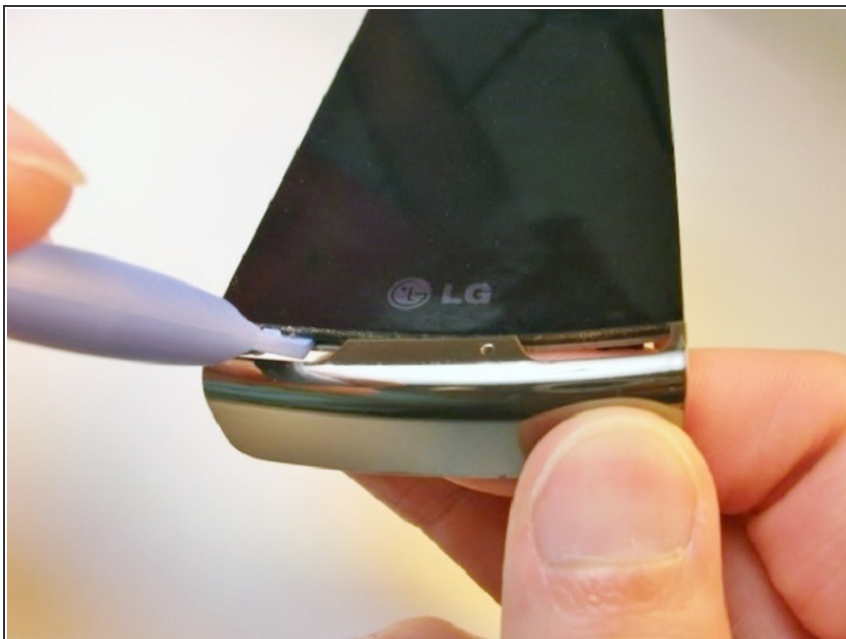

- Wedge the plastic opening tool under the screen where the buttons were to loosen it.

Step 14

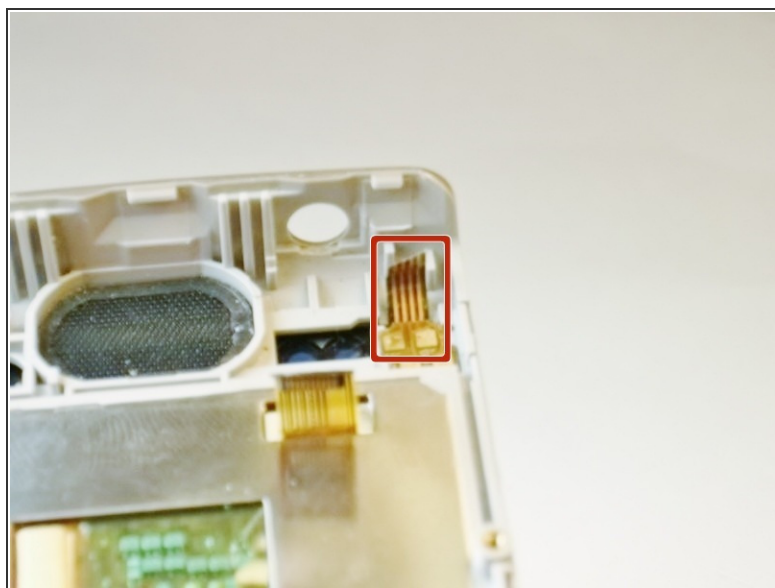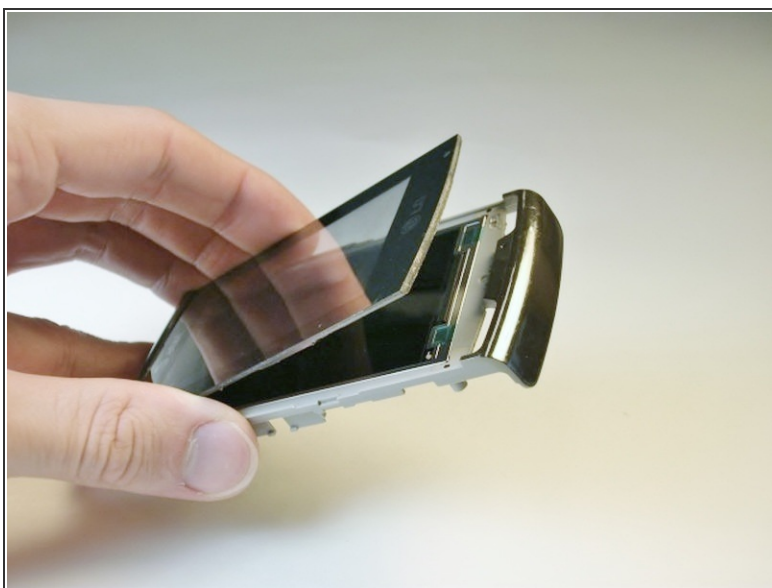

- Gently peel the touch screen off from the bottom of the phone.
- ⚠ Do not damage the yellow tab in the upper right corner of the phone.

To reassemble your device, follow these instructions in reverse order.

